

# AquaClear® Air Pumps / Pompes à air / Bombas de aire



**UL**  
LISTED

## CONGRATULATIONS

On your purchase of an AquaClear air pump. So that you may enjoy your new air pump to the fullest, please take a few moments to read this instruction booklet to become familiar with the installation and operation procedures. Be certain to read the SAFETY INSTRUCTIONS before using your air pump.

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** To guard against injury, basic safety precautions should be observed, including the following.

### 1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS

and all important notices on the appliance before using. Failure to do so may result in damage to the unit.

### 2. Danger

To avoid possible electrical shock, special care should be taken

since water is employed in the use of aquarium equipment. For each of

the following situations, do not attempt repairs yourself; return the

## FÉLICITATIONS

Pour l'achat d'une pompe à air AquaClear. Afin de profiter pleinement de votre nouvelle pompe à air, veuillez prendre un peu de temps pour lire le livret d'instructions qui vous familiarisera avec les procédures d'installation et de fonctionnement. Assurez-vous également de lire les CONSIGNES DE SÉCURITÉ avant d'utiliser votre pompe à air.

## CONSIGNES DE SÉCURITÉ IMPORTANTES

**MISE EN GARDE :** Afin de se protéger contre les blessures, des mesures de sécurité de base doivent être observées, y compris les suivantes :

### 1. Pour profiter pleinement de l'utilisation et de la compréhension de ce produit,

#### VEUILLEZ LIRE ET OBSERVER TOUTES LES CONSIGNES DE SÉCURITÉ

et toutes les notices importantes sur l'appareil avant de l'utiliser. Sinon, vous risquez d'endommager votre pompe.

### 2. Danger

Pour éviter tout choc électrique, une grande prudence est de rigueur. Dans chacune des situations suivantes, ne pas essayer de réparer l'appareil soi-même; l'expédier au fabricant pour réparation ou le jeter.

#### A. Ne pas immerger. Si l'appareil tombe à l'eau, NE PAS le ramasser!

## FELICITACIONES

Por haber comprado una nueva bomba de aire AquaClear. Para que pueda gozar al máximo de los beneficios de la nueva bomba de aire, téngase unos minutos para leer este folleto y familiarizarse con los procedimientos de instalación y funcionamiento. Antes de usar la bomba, lea bien las MEDIDAS DE SEGURIDAD.

## MEDIDAS DE SEGURIDAD IMPORTANTES

**ADVERTENCIA:** para evitar lesiones, se deben tomar precauciones de seguridad básicas, como las siguientes.

### 1. Para poder gozar, usar y comprender cómo funciona este producto, antes de

usarlo **LEA Y RESPETE TODAS LAS MEDIDAS DE SEGURIDAD** y todos los avisos importantes que están sobre el aparato. De no hacerlo, puede dañar el aparato.

### 2. Peligro!

Para evitar un posible choque eléctrico, deberá tener cuidado especial, dado la presencia del agua en el uso de los equipos para acuarios.

En cada una de las situaciones siguientes, no trate de hacer usted mismo las reparaciones; devuelva el aparato a un taller de servicio autorizado para que

lo arreglen o desechelo.

**A. No sumerja la bomba en el agua. Si el aparato se cae al agua, iNO LO RESCAKE!** Primero desenchúfelo y luego tómelo. Si los componentes eléctricos de la bomba se mojan, desenchúfela inmediatamente. (Equipo no sumergible únicamente)

### B.

Examine cuidadosamente el aparato después de instalarlo. Si hay agua en partes que no deben mojarse, no deberá encenderlo.

### C.

No haga funcionar ningún aparato cuyo cable o enchufe estén dañados, que no funcione bien o que se haya caído o dañado de alguna forma. El cable de alimentación de este aparato no puede reemplazarse; si se daña, el aparato deberá desecharse. Nunca corte el cable.

### D.

Para evitar lesiones, no toque las piezas que se mueven o se calientan, como los calefactores, reflectores, bombillas, etc.

### E.

Siempre desenchufe el aparato del tomacorriente cuando no lo usa, antes de poner o quitar piezas, y antes de limpiarlo. Nunca tire del cable para desenchufarlo.

### F.

Para evitar la posibilidad de que se moje el enchufe o el tomacorriente del aparato, ponga la base y el tanque del acuario al costado de un tomacorriente mural para impedir que el agua gotee dentro del mismo

appliance to the manufacturer for service or discard the appliance. **A. DO NOT immerse in water. If the appliance falls into the water, DON'T reach for it!** First unplug it and then retrieve it. If electrical components of the appliance get wet, unplug the appliance immediately. (Non-immersible equipment only)

**B.** Carefully examine the appliance after installation. It should not be

in contact with the receptacle.

### C.

Do not operate any appliance if it has a damaged cord or plug, or if it is malfunctioning or if it is dropped or damaged in any manner. The power cord of this appliance cannot be replaced; if the cord is damaged, the appliance should be discarded.

**D.** To avoid the possibility of the appliance plug or receptacle getting wet, position aquarium stand and tank to one side of a wall mounted receptacle to

prevent water from dripping onto the receptacle or plug. The "drip-loop" (see illustration) should be arranged by the user for each cord connecting an aquarium appliance to a receptacle. A "drip-loop" is that part of the cord below the level of the receptacle, or the connector if an extension cord is used, to prevent water travelling along the cord and coming in contact with the receptacle. If the plug or receptacle does get wet, DON'T unplug the cord. Disconnect the fuse or circuit breaker that supplies power to the appliance, then unplug and examine for presence of water in the receptacle.

**E.** Close supervision is necessary when an appliance is used by or near children.

**F.** To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, and the like.

**G.** If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.

## SAVE THESE INSTRUCTIONS

### INSTALLATION:

The air pump should be installed by following either of the two recommended methods:

### 1.

Place the air pump on a surface higher than the water level of the

aquarium. To avoid damage from accidentally spilled water, do not place the air pump directly below the aquarium. **Important:** It is recommended to always use a Check Valve (sold separately) in the air line between the air pump and the aquarium to prevent back-siphoning.

**7.** Do not install or store the appliance where it will be exposed to weather or to temperatures below freezing.

### 8.

Make sure an appliance mounted on a tank is securely installed before operating it.

### 9.

Read and observe all the important notices on the appliance.

### 10.

If a power failure occurs, or when removing filters and other air-driven accessories from the aquarium, to

power failure, or when removing filters and other air-driven accessories from the aquarium.

### 11.

To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, and the like.

### 12.

Place the pump on a surface which is dry and relatively free from dust. Do not place the air pump on carpet, as fibers might collect on pump and clog free-flowing air from entering pump. This will reduce the service life of the pump.

### 13.

Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.

### 14.

Do not use an appliance for other than intended use. The use of

attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

### 15.

Attach one end of the air line tubing (sold separately) to the air outlet(s) on air pump.

### 16.

Attach the other end of the airline tubing to filter(s), airstone(s), ornament(s) or any other air-driven aquarium accessory. Ensure that the

supplies power to the appliance through the air hose and into the pump in the event of a

### 17.

Close supervision is necessary when an appliance is used by or near children.

### 18.

Read and observe all the important notices on the appliance.

### 19.

If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.

### 20.

Do not use an appliance for other than intended use. The use of

attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

### 21.

Place the pump on a surface which is dry and relatively free from dust. Do not place the air pump on carpet, as fibers might collect on pump and clog free-flowing air from entering pump. This will reduce the service life of the pump.

### 22.

Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.

### 23.

Do not use an appliance for other than intended use. The use of

### 24.

Attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

### 25.

Read and observe all the important notices on the appliance.

### 26.

If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.

### 27.

Do not use an appliance for other than intended use. The use of

attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

### 28.

Place the pump on a surface which is dry and relatively free from dust. Do not place the air pump on carpet, as fibers might collect on pump and clog free-flowing air from entering pump. This will reduce the service life of the pump.

### 29.

Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.

### 30.

Do not use an appliance for other than intended use. The use of

### 31.

Attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

### 32.

Read and observe all the important notices on the appliance.

### 33.

If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.

### 34.

Do not use an appliance for other than intended use. The use of

attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

### 35.

Place the pump on a surface which is dry and relatively free from dust. Do not place the air pump on carpet, as fibers might collect on pump and clog free-flowing air from entering pump. This will reduce the service life of the pump.

### 36.

Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.

### 37.

Do not use an appliance for other than intended use. The use of

### 38.

Attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

### 39.

Read and observe all the important notices on the appliance.

### 40.

If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.

### 41.

Do not use an appliance for other than intended use. The use of

attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

### 42.

Place the pump on a surface which is dry and relatively free from dust. Do not place the air pump on carpet, as fibers might collect on pump and clog free-flowing air from entering pump. This will reduce the service life of the pump.

### 43.

Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.

### 44.

Do not use an appliance for other than intended use. The use of

### 45.

Attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

### 46.

Read and observe all the important notices on the appliance.

### 47.

If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.

### 48.

Do not use an appliance for other than intended use. The use of

attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

### 49.

Place the pump on a surface which is dry and relatively free from dust. Do not place the air pump on carpet, as fibers might collect on pump and clog free-flowing air from entering pump. This will reduce the service life of the pump.

### 50.

Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.

### 51.

Do not use an appliance for other than intended use. The use of

### 52.

Attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

### 53.

Read and observe all the important notices on the appliance.

### 54.

If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.

### 55.

Do not use an appliance for other than intended use. The use of

attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

### 56.

Place the pump on a surface which is dry and relatively free from dust. Do not place the air pump on carpet, as fibers might collect on pump and clog free-flowing air from entering pump. This will reduce the service life of the pump.

### 57.

Always unplug an appliance from an outlet when not in use, before putting on or taking


tubing and tape this end of the tubing to the very top frame of your aquarium.

3. Filter(s), air stone(s) and other air-driven ornaments can now be safely removed from your aquarium.

#### AIR FLOW ADJUSTMENT

In order to achieve correct airflow, a balance between the valve setting and the pump output is necessary. The ideal setting is obtained by minimum back pressure or nonrestriction of flow of air. Never physically restrict the output of the pump. Restriction causes damage to the diaphragm. (See BACK PRESSURE). Adjust air valve output as required.

To regulate air volume using an air control valve with multiple outlets, it is recommended to have the last valve available to release excess air pressure

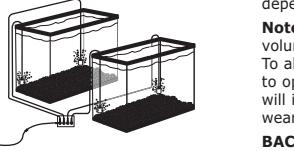


enlevés en toute sécurité de votre aquarium.

#### RÉGLAGE DU DÉBIT D'AIR

Pour un débit d'air convenable, il est nécessaire d'atteindre un équilibre entre le réglage de la soupape et le débit de la pompe. Le réglage idéal est obtenu par une contre-pressure minimale ou par la non-limitation du débit d'air. Ne jamais restreindre physiquement le débit d'air de la pompe, cela endommagerait le diaphragme. (Voir CONTRE-PRESSION). Réglér le débit d'air de la soupape tel qu'il est requis.

Pour régler le débit d'air à l'aide d'une soupape à air munie de multiples sorties, il est recommandé de conserver la dernière sortie disponible pour libérer l'accumulation de pression d'air en excès (voir CONTRE-PRESSION). Quand on règle la pression d'air, il est préférable de travailler à partir de la sortie la plus éloignée de celle de

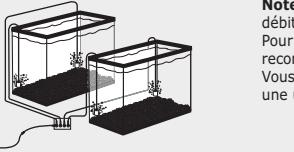

manguera y sujeté con cinta adhesiva el extremo desconectado al marco superior del acuario.

3. El(los) filtro(s), la(las) roca(s) viva(s) y otros adornos impulsados por aire ahora pueden sacarse del acuario sin ningún peligro.


#### REGULACIÓN DEL FLUJO DE AIRE

Para obtener un buen suministro de aire, es necesario encontrar un equilibrio entre el reglaje de la válvula y el caudal de la bomba. El reglaje ideal consiste en conservar un mínimo de contrapresión, o sea, un libre flujo de aire. No bloquee nunca el caudal de aire de la bomba, porque corre el riesgo de dañar el diaphragma. (Vea la sección sobre CONTRAPRESIÓN). Regule la salida de la válvula de aire, según sea necesario.

Para regular el volumen de aire con una válvula de control con salidas múltiples, se recomienda que la última válvula se destine a dejar salir el exceso de presión (vea la sección sobre CONTRAPRESIÓN). Para regular la presión de aire, es mejor hacerlo partiendo desde la válvula que está más lejos de la entrada de la válvula de aire. Recuerde que la última válvula debe estar completamente

cerrada para que no se pierda presión de aire. Regule las válvulas restantes. Una vez hecho lo anterior, abra lentamente la última válvula hasta que no se note ninguna pérdida de aire de los aparatos controlados por las otras válvulas. Para lograr y mantener un equilibrio de la presión de aire que va a los accesorios del acuario, puede ser necesario regular un poco más la válvula de aire, dependiendo de los aparatos que impulse la bomba.

**Nota:** si la primera válvula del grupo de control se abre totalmente, el volumen de aire que va a las salidas restantes se reducirá. Para aliviar el exceso de presión o la superproducción de aire, se recomienda abrir la última válvula cada dos semanas o cuando sea necesario. Al hacer esto, prolongará la vida útil de la bomba y de los diafragmas, impidiendo que se gaste prematuramente.

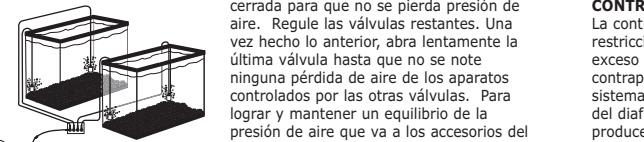

#### CONTRAPRESIÓN

La contrapresión es la acumulación de presión contra el diafragma debido a una restricción en la circulación del aire. Esto se debe a que la bomba produce exceso de aire o que los tubos de aire están bloqueados inadvertidamente. La contrapresión prolongada, ocasionada por rocas vivas o por la obstrucción del sistema, puede provocar la expansión del diafragma o su rotura. La expansión del diafragma lleva a una reducción del volumen de aire, mientras que la rotura produce una pérdida total del aire.

#### MANTENIMIENTO (APARIENCIA EXTERNA)

Quite el polvo y la suciedad con un paño suave y húmedo. No sumerja la bomba en el agua.

#### MANTENIMIENTO DE LAS ROCAS VIVAS, LAS MANGUERAS Y LOS ADORNOS

La bomba no requiere un mantenimiento interno regular durante su vida útil. El resto del sistema de aire se deberá controlar y limpiar periódicamente.

- Se deberá hacer una inspección cuidadosa de las mangueras de aire cuando

se hace el mantenimiento corriente del acuario. Ajuste o, si es necesario, cambie todas las secciones estranguladas, dobladas o dañadas.

• All attached air-driven aquarium ornaments should be regularly maintained. Algae growths should be removed from moving parts and kept as clean as possible. Internal air tubes should be cleaned.

#### REPLACEMENT PARTS

Repair kits for all wearable parts are available for all AquaClear Air Pumps. These can be easily obtained at your local aquarium and pet supply store.

Failure of the electric coil, or any other electrical part requires proper service, and restrictions will cause the diafragma to expand or rupture. An expanded diafragma leads to a loss of air volume while a rupture results in the total loss of air.

#### MAINTENANCE (EXTERNAL APPEARANCE)

Remove dust and grime with a soft, damp cloth. Do not immerse pump in water.

#### REMOVING THE PUMP

Whenever the air pump must be shut off and removed from the aeration system, always take off the air line before the pump is unplugged. This will prevent water from siphoning back into the pump. If the air line cannot be

#### TROUBLESHOOTING TIPS

If the air pump fails to produce air, check the following:

1. Ensure that the air pump is plugged in.

2. Ensure that there are no blockages in the air hose assembly and that all valves allow air passage. If no air is produced by the accessories in the

aquarium, remove the airline from the pump and ensure that air is being produced.

3. If the air pump produces no output, the most common problem

encountered with any air pump is a ripped or weakened diafragma.

Inspect the diafragma for tears or rips. Any opening in the diafragma set which has been dried over that period and cleaned before being

replaced.

#### CANADA: CALL US ON OUR TOLL-FREE NUMBER: 1-800-554-2436

between 8:30 a.m. and 5:00 p.m. Eastern Standard Time. Ask for Customer Service.

#### U.S.A.: CALL US ON OUR TOLL-FREE NUMBER: 1-800-724-2436

between 8:30 a.m. and 4:00 p.m. Eastern Standard Time, Monday through Friday.

Ask for Customer Service.

#### FOR AUTHORIZED GUARANTEE CONSUMER SERVICE:

Return at your expense with dated receipt and letter of instruction to:

#### CANADA: Rolf C. Hagen Inc. Consumer Repair, 3225 Sartelon, St. Laurent, Quebec H4R 1E8

#### U.S.A.: Rolf C. Hagen Inc. Consumer Repair, 305 Forbes Blvd Mansfield, MA 02048

#### WARRANTY

AquaClear Air Pumps are guaranteed against defects in material or workmanship under normal aquarium usage and service for as long as you own your pump. We offer a Lifetime Limited Warranty on all non-rubber parts which means that the pump will be repaired or replaced at the manufacturer's discretion, free of charge, when the complete pump is returned with proof of purchase and postage paid. Please call or write to us for details.

#### GARANTIE

Les pompes à air AquaClear sont garanties contre les défauts de matériaux et de main-d'œuvre dans des conditions d'usage et de service normaux de l'aquarium aussi longtemps que vous êtes propriétaire de la pompe. Nous offrons une garantie restreinte à la durée utile de l'appareil pour toutes les pièces qui ne sont pas en caoutchouc, c'est-à-dire que la pompe sera réparée ou remplacée sans frais. Si vous préférez, vous pouvez communiquer avec nous sur notre site Web à [www.hagen.com](http://www.hagen.com). Lorsque vous téléphonerez (ou écrivez), veuillez avoir à portée de la main tous les renseignements pertinents comme le numéro de modèle ou de pièce; nous vous demandons également de pouvoir préciser la nature du problème.

#### A-18370 Trousse de réparation pour AquaClear 5

Inclut : 1 diafragma, 1 soupape avec clapets, 1 joint d'étanchéité, 1 filtre

#### A-18372 Trousse de réparation pour AquaClear 10

Inclut : 1 diafragma, 1 valve plus flappers, 1 gasket, 1 filter

#### A-18374 Trousse de réparation pour AquaClear 20

Inclut : 1 diafragma, 1 valve plus flappers, 1 gasket, 1 filter

#### A-18376 Trousse de réparation pour AquaClear 30

Inclut : 2 diafragmas, 2 valves plus flappers, 1 gasket, 1 filter

#### A-18378 Trousse de réparation pour AquaClear 50

Inclut : 2 diafragmas, 2 valves plus flappers, 1 gasket, 1 filter

#### DÉPANNAGE

Si la pompe ne produit pas d'air, examiner les points suivants :

1. S'assurer que la pompe est branchée.
2. Vérifier que le tuyau à air et toutes les soupapes laissent bien passer l'air. Si les accessoires d'aération ne produisent pas d'air dans l'aquarium, retirer le tuyau à air de la pompe pour s'assurer qu'il dégagé de l'air.
3. Si la pompe à air ne fournit aucun rendement, la cause la plus commune est un diafragma déchiré ou abîmé. Examiner le diafragma pour repérer des accrocs et des déchirures. Toute ouverture dans le diafragma empêchera la pompe de produire de l'air pour l'aération. Toujours inspecter d'abord le tuyau à air pour s'assurer qu'il n'y a pas de débris ou accumulation d'algues.

#### A-18370 Trousse de réparation pour AquaClear 5

Inclut : 1 diafragma, 1 soupape avec clapets, 1 joint d'étanchéité, 1 filtre

#### A-18372 Trousse de réparation pour AquaClear 10

Inclut : 1 diafragma, 1 soupape avec clapets, 1 joint d'étanchéité, 1 filtre

#### A-18374 Trousse de réparation pour AquaClear 20

Inclut : 1 diafragma, 1 soupape avec clapets, 1 joint d'étanchéité, 1 filtre

#### A-18376 Trousse de réparation pour AquaClear 30

Inclut : 2 diafragmas, 2 soupapes avec clapets, 1 joint d'étanchéité,

#### A-18378 Trousse de réparation pour AquaClear 50

Inclut : 2 diafragmas, 2 soupapes avec clapets, 1 joint d'étanchéité,

#### PIÈCES DE RECHANGE

Si cet appareil vous semble défectueux ou que vous vous posez des questions quant à son fonctionnement, n'hésitez pas à communiquer avec nous avant de le retourner au détaillant. La plupart des problèmes peuvent être traités rapidement en utilisant notre ligne téléphonique sans frais. Ou si vous préférez, vous pouvez communiquer avec nous sur notre site Web à [www.hagen.com](http://www.hagen.com). Lorsque vous téléphonerez (ou écrivez), veuillez avoir à portée de la main tous les renseignements pertinents comme le numéro de modèle ou de pièce; nous vous demandons également de pouvoir préciser la nature du problème.

#### CANADA: TÉLÉPHONER À NOTRE NUMÉRO SANS FRAIS : 1 800 554-2436

Entre 8 h 30 et 17 h (HNE). Demander notre Service à la clientèle.

#### RÉPARATION D'UN ARTICLE SOUS GARANTIE :

Retourner, à vos frais, avec un reçu daté et une lettre d'instruction à: Service de réparation, **CANADA:** Rolf C. Hagen Inc., 3225, rue Sartelon, Saint-Laurent, Québec H4R 1E8

#### GARANTÍA

Las bombas de aire AquaClear están garantizadas contra defectos de materiales o mano de obra en condiciones normales de uso y servicio durante todo el tiempo que usted sea propietario de las mismas. Esta garantía limitada a la vida útil del producto se aplica para todos los componentes que no son de caucho, lo que significa que la bomba será reparada o sustituida, a criterio del fabricante, sin ningún cargo, cuando nos escriba o nos llame, tenga a la mano la información importante como el número de modelo o el número de pieza y la naturaleza del problema.

#### CANADÁ: LLÁMENOS AL 1-800-554-2436

entre las 8.30 am y las 5.00 pm, hora oficial del este. Pregunte por el Departamento de Servicio al Cliente. EE.UU.: LLÁMENOS AL 1-800-724-2436 entre las 8.30 am y las 4.00 pm, hora oficial del este, de lunes a viernes. Pregunte por el Departamento de Servicio al Cliente.

#### REPARACIÓN DE UN ARTÍCULO BAJO GARANTÍA:

Devuélvalo adjuntando una factura fechada como prueba de su adquisición a: **CANADA:** Rolf C. Hagen Inc. Consumer Repair 3225 Sartelon, St-Laurent, Quebec, H4R 1E8 **EE.UU.:** Rolf C. Hagen Inc. Consumer Repair, 305 Forbes Blvd Mansfield, MA 02048

#### CÓMO SACAR LA BOMBA

Cuando la bomba de aire deba apagarse y desconectarse del sistema de aireación, siempre desconecte la manguera de aire antes de desenchufar el aparato. Esto impedirá que el agua se sifone en la bomba. Si la manguera de aire no puede sacarse antes de desenchufar la bomba del tomacorriente, levante la bomba por encima del nivel del agua.

#### HAGEN

Distributed by / Distribué par :  
Canada: Rolf C. Hagen Inc, Montreal, QC H4R 1E8  
U.S.A.: Rolf C. Hagen (U.S.A.) Corp., Mansfield, MA 02048  
Printed in China / Imprimé en Chine MTL